

**КЕРІВНИЦТВО
КОРИСТУВАЧА**

CH
Cooper & Hunter

**ПІДЛОГОВІ КУЛЕРА
З КОМПРЕСОРНИМ
ОХОЛОДЖЕННЯМ**

НИЖНЄ ЗАВАНТАЖЕННЯ



CH-V45BN

ЗМІСТ

Техніка безпеки

01	Техніка безпеки	3
----	-----------------------	---

Експлуатація та технічне обслуговування

02	Назва частин	4
03	Основні технічні параметри	4
04	Спосіб встановлення	5
05	Інструкція з експлуатації	5

Довідка

06	Вирішення проблем	6
07	Очищення та догляд	8
08	Встановлення	9

01. ТЕХНІКА БЕЗПЕКИ



ПРИМІТКА

- ▷ Будь ласка, суворо дотримуйтесь цієї інструкції з експлуатації для правильної роботи.
- ▷ Щоб запобігти травмам і втраті майна, дотримуйтеся наведених нижче правил безпеки.
- ▷ Якщо ви не дотримуєтеся цих правил безпеки, неправильна робота може призвести до нещасного випадку.

Правила електробезпеки

1. Цим приладом можуть користуватися діти віком від 8 років і особи з обмеженими фізичними, сенсорними чи розумовими здібностями або з браком досвіду та знань, якщо вони перебувають під наглядом або отримали інструкції щодо безпечного використання приладу та розуміють небезпеки. Діти не повинні гратися з пристроєм. Чищення та технічне обслуговування не повинні виконуватися дітьми без нагляду.
2. Уникайте підключення приладу до мережі електроживлення, коливання напруги в якій можуть виходити за межі діапазону 180-240 В.
3. Перед підключенням приладу до мережі переконайтеся, що шнур живлення не має пошкоджень.
4. Не залишайте прилад включеним без нагляду.
5. Не залишайте прилад включеним без нагляду.
6. Прилад повинен підключатися до мережі електроживлення з заземлюючим контактом.
7. Після зберігання приладу в холодному приміщенні або після перевезення в зимових умовах, перед підключенням до електромережі потрібно дати йому прогрітися при кімнатній температурі протягом 1 - 2 годин в розпакованому вигляді.
8. Коли ви не користуєтеся приладом будь ласка, вийміть вилку з розетки. Будь ласка, будьте обережні, вставляючи або підключаючи вилку, і не витягуйте вилку тягнувши за шнур.
9. Щоб уникнути перевантаження, не використовуйте розетку разом з іншими електроприладами. Потужність розетки повинна бути такою ж, як і вилка електроприладів. При цьому вилка повинна бути щільно вставлена в розетку.




УВАГА



- ▷ Якщо шнур живлення пошкоджено, його має замінити виробник, його сервісний агент або особа з аналогічною кваліфікацією, щоб уникнути небезпеки.

02. НАЗВА ЧАСТИН

! Даний прилад (накше званий кулер або вододиспенсер) призначений для нагріву та охолодження високоякісної бутильованої питної води.

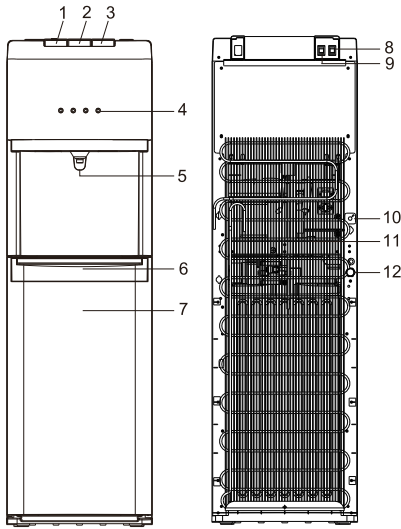

(вигляд спереду)

(вигляд ззаду)

- ① Кнопка гарячої води
- ② Кнопка кімнатної води
- ③ Кнопка холодної води
- ④ Панель індикації
- ⑤ Носик
- ⑥ Водозбірник
- ⑦ Дверцята
- ⑧ Вимикач нагріву
- ⑨ Вимикач охолодження
- ⑩ Шнур живлення
- ⑪ Зливний отвір
- ⑫ Випарник

03. ОСНОВНІ ТЕХНІЧНІ ПАРАМЕТРИ

Напруга	220-240~В	
Частота	50 Гц	
Споживча потужність	Охолодження	100 Вт
	Нагрів	420 Вт
Загальна потужність	520 Вт	
Теплопродуктивність	90-95 °С 4 л/год	
Холодопродуктивність	5-10 °С 2.5 л/год	
Тип	Напольний, Нижня загрузка бутля Компресорне охолодження	
Холодоагент	R134a	

Основні користувальницькі функції

- ▷ Нагрівання і підтримання температури води в діапазоні 90 - 95 ° С;
- ▷ Охолодження і підтримання температури води в діапазоні 5 - 10 ° С;



ПРИМІТКА

- ▷ Зазначені характеристики дійсні при експлуатації приладу в приміщенні при температурі навколишнього повітря від 10 до +43 С.

04. СПОСІБ ВСТАНОВЛЕННЯ

1. Прилад слід встановлювати на рівній, твердій поверхні.
2. Місце установки приладу повинно виключати потрапляння прямих сонячних променів на нього, так як це призводить до вигорання пластикових деталей корпусу.
3. Не допускайте доторкання приладу з іншими предметами, що стоять поруч, так як це призводить до виникнення сторонніх шумів.
4. Не встановлюйте прилад поблизу джерел тепла, таких як батареї центрального опалення, обігрівачі тощо.
5. Навколо приладу повинно бути досить вільного простору для вільної циркуляції повітря.



ПРИМІТКА

Прилад розрахований на експлуатацію в приміщенні при температурі навколишнього повітря від 10 до +43 °С.

05. ІНСТРУКЦІЯ З ЕКСПЛУАТАЦІЇ

Встановіть пляшку з водою

1. Відкрийте двері шафи.
2. Розмістіть блок погрузної трубки на спеціальному кріпленні.
3. Поставте нову пляшку за біля приладу. Зніміть пластиковий ковпачок з верхньої частини бутля повністю.
4. Очистіть зовнішню частину нового бутля тканиною.
5. Помістіть погрузну трубку в пляшку.
6. Посуньте комірць вниз, доки він не стане на місце зі клацанням.
7. Натисніть головку вниз, доки трубка не торкнеться дна бутля.
8. Поставте бутиль в шафу та закрийте дверцята.



Підключення до мережі

Підключіть шнур до правильно заземленої розетки.

Одразу почне відкачуватися вода від бутля до баків охолодження та нагріву води. Це займе до 3-5 хвилин, щоб заповнити баки вперше. Протягом цього періоду насос буде працювати безперервно. Це нормально.

Включення нагріву та охолодження



ПРИМІТКА

Цей пристрій не подаватиме гарячу або холодну воду, доки перемикачі не будуть увімкнені.

Щоб увімкнути, натисніть перемикачі живлення до гори, щоб розпочати нагрів та охолодження води.

- Якщо ви не хочете нагрівати воду, переведіть червоний перемикач у положення off.
- Якщо ви не хочете охолоджувати воду, переведіть зелений перемикач у положення off.

05. ІНСТРУКЦІЯ З ЕКСПЛУАТАЦІЇ

Цей пристрій було перевірено та продезінфіковано перед пакуванням і транспортуванням.

Під час транспортування пил і запахи можуть накопичуватися в резервуарі та водопроводах. Злийте принаймні один літр води, перш ніж пити воду.

Розлив холодної води

Після увімкнення знадобиться до 1 години, щоб вода досягла максимально холодної температури. Протягом цього часу компресор може працювати безперервно. Це нормально.

1. Поставте бутиль, склянку, чашку або каструлю під носик.
2. Натисніть кнопку холодної води вниз, щоб отримати холодну воду.
3. Відпустіть кнопку, коли вода закінчиться.

Розлив гарячої води

Після увімкнення гаряча вода буде доступна через 15-20 хвилин.

1. Поставте пляшку, склянку, чашку або каструлю під носик.
2. Посуньте червоний замок безпеки від дітей ліворуч, а потім натисніть кнопку гарячої води, щоб отримати гарячу воду.

Заміна бутля

Коли пляшка порожня червоне світло на індикаторах буде блимати. Замініть пляшку якомога швидше.



ПРИМІТКА

Не виливати гарячу воду, воду кімнатної температури або холодну воду, якщо блимає червоне світло, оскільки резервуари можуть бути порожніми та призвести до перегріву диспенсера.

1. Відкрийте дверцята шафи.
2. Витягніть порожній бутиль з шафи.
3. Вийміть погрузну трубку із порожнього бутля. Помістіть блок трубок на спеціальне кріплення.
4. Відкладіть порожній бутиль.
5. Поставте новий бутиль біля приладу. Зніміть пластиковий ковпачок з верхньої частини бутля повністю.
6. Помістіть погрузну трубку у бутиль. Посуньте комір вниз, доки він не стане на місце із клацанням. Натисніть головку вниз, доки трубки не торкнуться дна тубля.
7. Поставте бутиль в шафу та закрийте дверцята.

06. ВИРІШЕННЯ ПРОБЛЕМ

Проблема	Ймовірна причина	Рішення
Немає нагріву, не горить контрольна лампочка.	Шнур живлення не під'єднано або під'єднано погано	Підключити апарат до електромережі.
	Перегорів запобіжник.	Замінити запобіжник.
	Немає напруги в електромережі.	Перевірити наявність напруги в електромережі.
Недостатнє охолодження води	Прилад не встигає охолоджувати воду.	Дати час апарату набрати потрібну температуру води (10-20 хвилин)
	Недостатня вентиляція задньої панелі апарату.	Забезпечити доступ повітря до задньої панелі приладу
	Перегрів деталей системи охолодження.	Тимчасово відключити прилад від мережі і дати системі охолонути (30 хв.)
Витік води.	Бракований бутиль.	Зняти бракований бутиль, злити з будь-якого краника 0,5 л води перед установкою нового балона.
	Несправний краник.	Замінити краник.
Недостатній нагрів води.	Прилад не встигає нагріти воду.	Дати час апарату набрати потрібну температуру води (10-15 хвилин)
Немає нагріву води.	Виключений тумблер нагріву води.	Включити тумблер нагріву води.
Виникнення шуму.	Прилад встановлений на нерівній поверхні або торкається інших предметів	Переставити прилад рівно, та на відстані від інших предметів.

07. ОЧИЩЕННЯ ТА ДОГЛЯД



УВАГА



Щоб уникнути нещасного випадку, від'єднайте прилад від мережі перед початком роботи відповідно до наступних інструкцій.

1. Прилад був продезінфікований перед відправкою з заводу. Очистіть диспенсер, перш ніж встановлювати повний бутиль з водою в перший раз.

2. Інструкція з очищення та зливу:


1) Переконайтеся, що вимикач живлення знаходиться в положенні О (вимкнено), і вийміть вилку перед чищенням.

2) Викрутіть гвинти, щоб зняти верхню кришку, кришку холодного бака, і сепаратор.


3) Налийте 2 літра чистої води в холодний резервуар, щоб очистити його.

4) Поставте велике відро під зливний отвір, який знаходиться в задній частині приладу, потім зніміть зливну кришку та злийте воду.


5) Поставте на місце дренажну пробку, сепаратор, кришку бака охолодження та верхню кришку після зчіджування. Переконайтеся, що труби та дроти підключені належним чином, щоб прилад працював правильно.

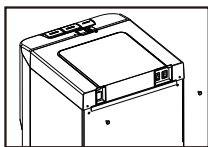

①

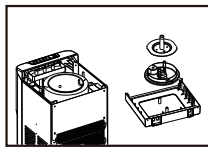

②

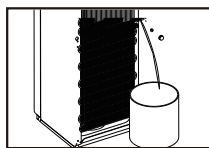

③

Зверніть увагу

1) Прибирання повинно проводитися під керівництвом або професійним персоналом.

2) Прилад нагріває воду до температури приблизно 85 С. Це може спричинити серйозні опіки. Будь ласка, використовуйте його обережно.

Дезінфекція:

Прилад слід продезінфікувати дезінфікуючим засобом, придбаним окремо в аптеці або в спеціалізованих магазинах, відповідно до інструкції з використання дезінфікуючого засобу, а потім очистити його (див. інструкцію "очищення та догляд"). Зазвичай це потрібно робити кожні три місяці.

Видалення мінеральних відкладень:

Змішайте 4 літри води з 200 г лимонної кислоти, влийте в диспенсер та переконайтеся, що вода витікає з крана гарячої води. Увімкніть живлення та нагрівайте приблизно 10 хвилин, через 30 хвилин, злийте рідину та промийте її водою два-три рази. Зазвичай це слід робити кожні шість місяців.

Ніколи не розбирайте цей прилад самостійно, щоб уникнути небезпеки через пошкодження приладу.



08. ВСТАНОВЛЕННЯ



ПРИМІТКА

Щоб запобігти хитанню або падінню приладу, встановіть відповідні кронштейни.

- 1-2. Послабте гвинт лівого або правого нижнього кута. Як показано на малюнку.
3. Використовуйте гвинт, щоб зафіксувати кронштейн ліворуч або праворуч в нижньому куті кулера води.
4. Зробіть отвір на поверхні підлоги, де буде встановлено диспенсер для води.
5. Закріпіть кронштейн на підлозі, закрутивши гвинти.
6. Затягніть гвинт.

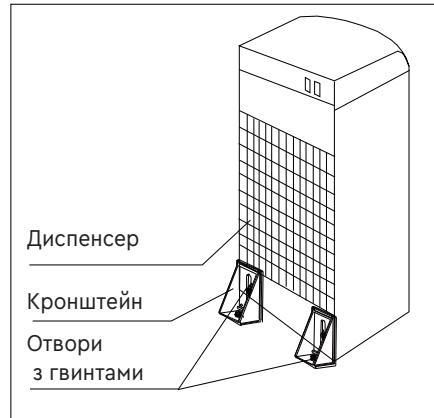

Правильна утилізація цього виробу: це маркування вказує на те, що цей виріб не можна викидати разом з іншими побутовими відходами на території ЄС. Щоб запобігти можливій шкоді навколишньому середовищу або здоров'ю людини через неконтрольовану утилізацію відходів, переробляйте їх відповідально, щоб сприяти сталому повторному використанню матеріальних ресурсів. Щоб повернути використаний пристрій, скористайтеся системами повернення тазбору або зверніться до продавця, у якого було придбано продукт. Вони можуть відправити цей продукт на екологічно безпечну переробку.

Виробник:

Cooper&Hunter International Corporation, FL, Miami, USA

www.cooperandhunter.com

E-mail: info@cooperandhunter.com

Дата виготовлення вказується на етикетці на приладі.

*Cooper&Hunter постійно працює над удосконаленням своєї продукції, тому інформація, яка приведена в цьому керівництві, може бути змінена без попереднього повідомлення споживачів.

USER'S MANUAL



HOT&COLD WATER DISPENSER COMPRESSOR COOLING

Bottom loading



CH-V45BN

CONTENT

Safety Regulation

01	Safety Regulation	13
----	-------------------------	----

Operation and Maintenance

02	Parts Name.	14
03	Main Technical Parameters	14
04	Installation Method ..	15
05	Operation instruction .	15

Help

06	Troubleshooting.	17
07	Cleaning.	18
08	Machine installation.	19

01. SAFETY REGULATION




NOTICE

- ▷ Please follow this instruction manual strictly for correct operation.
- ▷ In order to prevent personal injury and property loss, please follow those safety regulations as below.
- ▷ If you don't follow these safety regulations, wrong operation may cause accident.

Caution

1. The ground wire be connected well.
2. Keep children away from the machine to avoid hurting them during your usage.
3. If the drinkers not yet watered up and the power is switched wrong. The machine may be over-heated then. The protect the switch will cut off the power automatically to protect the heating series. Just waiting for 15 minutes, the user can operate the machine normally again according to the correct installing process.
4. Place the water dispenser on level ground, keep it 15 cm away from the wall to let air through.
5. Don t keep combustibles near the water dispenser, please.
6. Don t turn the tap at will to avoid making a leaking or a water-cut.
7. Cut off the power at a long time of no using. Drain the left water in the machine. Open the cupboard door of the refrigerator.
Clean the drinker inside and outside, close the door again after about 2 days and cover the machine with a dust cover.
8. Pull out the power socket before repairing or maintaining.
9. If there are dust and dirt on the condenser surface, use a piece of watered soft cloth to clean it up.
10. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
12. Children should be supervised to ensure that they do not play with the appliance.
13. This instrument only can be used inside of room.

02. PARTS NAME

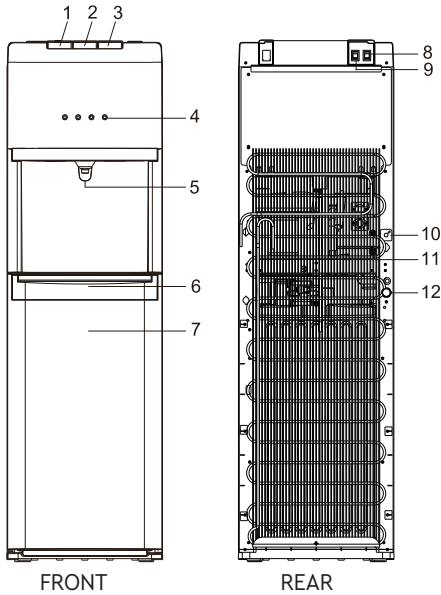

- ① Button of hot water
- ② Button of ambient water
- ③ Button of cold water
- ④ Indicator panel
- ⑤ Spout
- ⑥ Water Collector
- ⑦ Door
- ⑧ Heating switch
- ⑨ Cooling switch
- ⑩ Power Supply Cord
- ⑪ Drain Outlet
- ⑫ Condenser

03. MAIN TECHNICAL PARAMETERS

Rated Voltage	220-240~V	
Rated Frequency	50 Hz	
Rated Power Input	Cooling	100 W
	Heating	420 W
Total power	520 W	
Heating Capacity	90-95 °C 4 L/H	
Cooling Capacity	5-10 °C 2.5 L/H	
Type	Floor stand, Compressor cooling, Bottom loading	
Refrigerant	R134a	

Basic user functions

- ▷ Heating and maintenance of water temperature in the range of 90 - 95 °C;
- ▷ Cooling and maintenance of water temperature in the range of 5 - 10 °C;



NOTICE

- ▷ The specified characteristics of the real operation of the device indoors at an air temperature of 10 to +43 C.

04. INSTALLATION METHOD

1. Tear off the hygienic tag on the lid of a pure water bottle and tap it on the smart of the drinker promptly;
2. Press the water tap to let off the air in the tank until water is out, knock the tap for several times in order to prevent the water Channel from being clogged with air bubbles.
3. When the drinker is used at the first time or after a long time stopping, wash the tank inside for 2 times with pure water.
4. It is only after finishing the above processes that you can connect the power.
5. There should be enough free space around the device for free air circulation.




NOTICE

The device is intended for indoor use at an ambient air temperature of 10 to +43 °C.

05. OPERATION INSTRUCTION

Install water bottle

1. Open cabinet door.
2. Place probe assembly on probe hanger.
3. Place new bottle outside of cabinet.
4. Remove entire plastic cap from top of bottle.
5. Clean outside of new bottle with a cloth.
6. Place probe into bottle.
7. Slide collar down until it clicks in place.
8. Push head down until tube hits bottom of bottle.
9. Slide bottle into cabinet and close door.

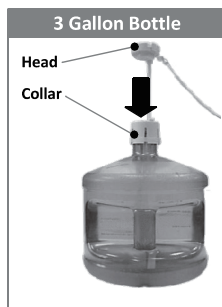

Provide Electricity

Plug cord into a properly grounded wall outlet.

At this time water will be pumped. from the bottle to the hot and cold tanks. It will take up to 3 to 5 minutes to fill the tanks for the first time. During this period the pump will run continuously. This is normal.

Activate Heating and Cooling



NOTICE

This unit will not dispense hot or cold water until the switches are activated.

To activate, push top side of power switches in to start heating and cooling water.

- If you do not want to heat water, flip the red switch to OFF position.
- If you do not want to cool water, flip the green switch to OFF position.

05. OPERATION INSTRUCTION

This unit has been tested and sanitized prior to packing and shipping. During transit dust and odors can accumulate in the tank and lines. Dispense and dispose at least one quart of water prior to drinking any water.

Dispensing Cold Water

After set-up, it will take up to 1 hour to get water to maximum cold temperature. During this time the compressor could run continuously. This is normal.

1. Put bottle, glass, pitcher or cooking pot below spout.
2. Press cold water button downwards to get cold water.
3. Release button once finish getting water.

Dispensing Hot Water

After set-up, hot water will be available in 15-20 minutes.

1. Put bottle, glass, pitcher or cooking pot below spout.
2. Slide the red child safety lock to the left and then press hot water button to get hot water.

Changing Bottles

A red light on indicator lights flashes when the bottle is empty. Replace the bottle as soon as possible.



NOTICE

Do not dispense hot, room temp. or cold water if the red light is flashing as the tanks may be empty and cause the dispenser to overheat.

1. Open the cabinet door.
2. Slide empty bottle out of the cabinet.
3. Remove probe assembly from the empty bottle. Place probe assembly on the probe hanger.
4. Put the empty bottle aside.
5. Place new bottle outside of cabinet. Remove the entire plastic cap from top of bottle.
6. Place probe into the bottle. slide collar down until it clicks in place. Push head down until tubes hit bottom of bottle.
7. Slide bottle into cabinet and close the door.

06. TROUBLESHOOTING

Error	Error reason	Method
There is no heating, the control lamp does not light up.	Power cord is not connected or connectedly badly	Energize the unit and make sure it is well connected
	The fuse is blown.	Replace the fuse.
	There is no voltage in the network.	Check the presence of voltage in the electrical network.
Insufficient water cooling	The device does not have time to cool the water.	Give the device time to reach the desired water temperature (10-20 minutes)
	Insufficient ventilation of the back panel of the device.	Provide air access to the back of the device.
	Overheating of parts of the cooling system.	Temporarily disconnect the device from the network and let the system cool down (30 min.)
Water leak.	Defective bottle	Remove the faulty bottle, drain 0.5 L of water from any tap before installing the new bottle.
	Faulty tap.	Replace the tap.
Insufficient water heating.	The device does not have time to heat the water.	Give the device time to select the desired water temperature (10-15 minutes)
There is no water heating.	The water heating switch is turned off.	Turn on the water heating switch.
Abnormal noise	The device is installed on an uneven surface or is touching other objects.	Place the device evenly and away from other objects.

07. CLEANING

! WARNING !

To avoid accident, unplug the machine before operation according to the following instructions.

1. The machine had been disinfected before shipping from factory. Clean the dispenser prior to installing a full bottle of water for the first time.

2. Cleaning and draining instruction:


1)make sure the power switch in the O(off) position and unplug the water dispenser before cleaning.

2)Twist out the screws to take down top cover, cold tank cover, and separator.


3)Fill 0.6 gallons pure water into cold tank to clean it.

4)Place a large water bucket beneath the drain outlet which is in the back of water dispenser, then remove the drain cover and drain the water.


5)Reposition the drain cover, sparator, cold tank cover, and top cover after draining. Ensure the pipe and wires are connected properly, then you can use the machine normally.

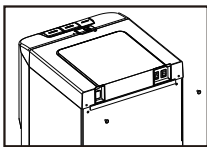

①

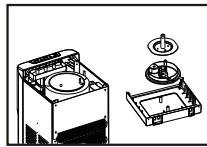

②

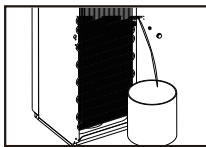

③

Attention:

1) The cleaning must be under the guidance or professional staff.

2) The dispenser heats water to a temperature of approximately 85 C. It can cause severe burns. Please operate it carefully.

Sanitizing:

The machine should be disinfected with the disinfectant separately bought from drugstore or marketplace according to the instruction manual of the disinfectant and then clean it with (see cleaning and draining instruction). Generally this should be done every three months.

To Remove Mineral Deposits:

Mix 4 liters water with 200g citric acid crystals, inject into the machine and make sure the water can flow out of the hot water tap. Switch on the power and heat it about 10 minutes, 30 minutes later, drain off the liquor and clean it with water for two or three times. Generally this should be done every six months.

Never disassemble this machine by yourself to avoid danger from damaging machine.


08. MACHINE INSTALLATION



NOTICE


To prevent the machine from swaying or falling, Please install the bracket accordingly.

- 1-2. Loosen the screw of the left or right bottom angle. Just as the picture shows.
3. Use the screw to fix the bracket on the left or right bottom angle of the water dispenser.
4. Make a hole on the floor's surface where. The water dispenser will be installed.
5. Fix the bracket on the floor by screwing tightly.
6. Tighten the screw.

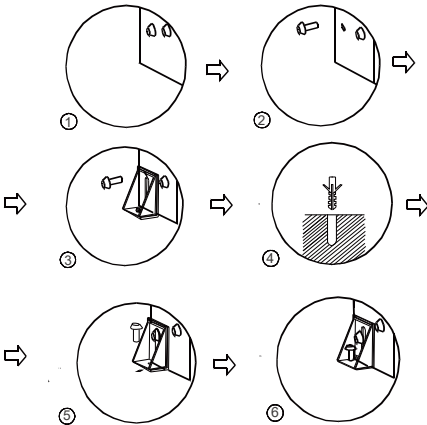

Correct Disposal of This Product: This marking indicates that this product should not be disposed with other household wastes throughout the EU.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

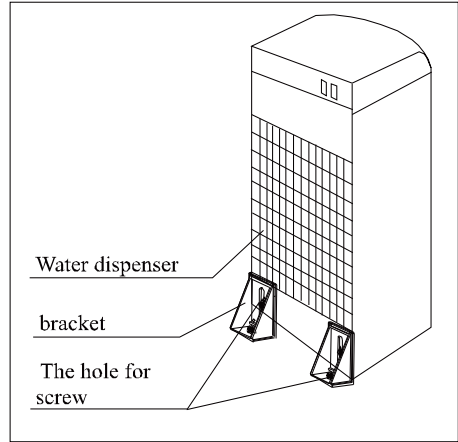

! WARNING !

To avoid accident, unplug the machine before operation according to the following instructions.

9. EXCEPTION CLAUSES

1. Damage the product due to improper use or misuse of the product;
2. Alter, change, maintain or use the product with other equipment without abiding by the instruction manual;
3. After verification, the defect of product is directly caused by corrosive gas;
4. After verification, defects are due to improper operation during transportation of product;
5. Operate, repair, maintain the unit without abiding by instruction manual or related regulations;
6. After verification, the problem or dispute is caused by the quality specification or performance of parts and components that produced by other manufacturers;
7. The damage is caused by natural calamities, bad using environment or force majeure.

Designed by Cooper&Hunter International Corporation, FL, Miami, USA
www.cooperandhunter.com
E-mail: info@cooperandhunter.com
The manufacturing date is indicated on the device label.

*Cooper&Hunter is constantly working on improvement by pouring their products, so what information given in this manual, may be changed- without prior notice to consumers.